

## GUARANTEE

This product is guaranteed against faulty parts or workmanship for 12 months from the date of purchase.

To validate the guarantee the product must be returned to the retailer or supplier for repair or replacement with this sheet completed with the detail requested. (Please do not send a photocopy).

Imperial Fires Limited are not responsible for any cost incurred by the customer in returning the product to the seller.

**When making a claim under warranty you must provide the details requested below otherwise your warranty might be invalid.**

**Return this form to your dealer or contact Imperial Fires Limited.**

**Imperial Fires Limited reserves the right to refuse warranty for any product returned that does not have valid proof of date of purchase:**

**Please return your original sales invoice with any returned product.**

This guarantee does not affect your statutory rights.

Insert Your Full Name	<input type="text"/>
Insert Your Full Address	<input type="text"/>
Post Code	<input type="text"/>
Daytime Contact Telephone Number	<input type="text"/>

Affix Data Label

Return this form to

Widney Leisure Ltd  
St Marys Road  
Nuneaton  
Warwickshire  
CV11 5AU  
Telephone +44(0) 2476 377550  
Email: sales@widney-leisure.co.uk



# IMPERIAL FIRES

## INSTRUCTIONS Victorian Inset

### IMPERIAL FIRES LTD.

St Marys Road  
Nuneaton  
Warwickshire CV11 5AU

TELEPHONE : 02476 377550  
Email : sales@widney-leisure.co.uk  
Web: www.widney-leisure.co.uk

# IMPERIAL FIRES LTD.

St Marys Road, Nuneaton, Warwickshire, CV11 5AU  
TELEPHONE : 02476 377550

## NOTES

### **PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE**

Your **IMPERIAL** electric fire has been made with great care. Here are some instructions for cleaning and maintenance, which will help you to keep your fire in good condition for many years. If you experience any parts or service problems, contact either your retailer or **IMPERIAL FIRES LTD.**

#### **WARNING:**

- THIS APPLIANCE MUST BE EARTHED.
- DO NOT COVER OR HANG CLOTHES, TOWELS etc. OVER OR NEAR THE HEATER AS THIS COULD CAUSE OVER-HEATING AND POSSIBLE DAMAGE.
- THIS APPLIANCE MUST NOT BE LOCATED BELOW A SOCKET OUTLET.
- DO NOT USE THIS HEATER WITH A THERMAL CONTROL, PROGRAMME CONTROLLER, TIMER OR ANY OTHER DEVICE WHICH SWITCHES THE HEATER ON AUTOMATICALLY, SINCE A FIRE RISK EXISTS IF THE HEATER IS COVERED OR DISPLACED.
- DO NOT USE THIS HEATER IN THE IMMEDIATE SURROUNDINGS OF A BATH, SHOWER OR SWIMMING POOL.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY YOUNG CHILDREN OR INFIRM PERSONS UNLESS THEY ARE ADEQUATELY SUPERVISED BY A RESPONSIBLE PERSON TO ENSURE THAT THEY CAN USE THE APPLIANCE SAFELY.
- THE APPLIANCE SHOULD NOT BE TAMPERED WITH.
- YOUNG CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

## **USER'S INSTRUCTIONS**

Before connecting the fire check that the supply voltage is the same as that stated on the fire. These appliances must only be used on AC supply, fuse rating 13 amps.

This appliance must be positioned so that the plug is accessible. If the supply cord of the appliance is damaged it must be replaced by a competent electrician or similarly qualified person.

### **ELECTRICAL CONNECTIONS - UNITED KINGDOM ONLY**


This appliance must only be connected to 230 VAC 50Hz Supply.

### **WARNING THIS APPLIANCE MUST BE EARTHED**

Green & Yellow	-	Earth
Blue	-	Neutral
Brown	-	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire that is coloured green & yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green & yellow.

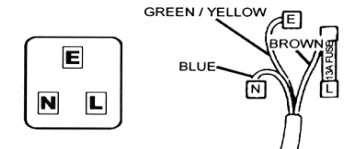

The wire that is coloured blue must be connected to the terminal that is marked with the letter N, or coloured black.

The wire that is coloured brown must be connected to the terminal that is marked with the letter L, or coloured red.

If the terminals of the plug are unmarked, consult a qualified electrician.

**FOR FUSED PLUGS A 13 AMP FUSE APPROVED TO BS 1362 MUST BE USED.**

### **HARD WIRING THE FIRE**

IF DESIRED THE FIRE CAN BE HARD WIRED TO A SWITCHED FUSED ISOLATOR.

IF A SWITCH FUSED ISOLATOR IS USED ENSURE THAT THE FUSE IN THE ISOLATOR IS FITTED WITH A FUSE RATED AT 13AMP TO BS1362.

It is recommended that this work be undertaken by a competent engineer.

This wiring must be long enough for the Fire to be removed from the Fireplace when bulb replacement is needed.

## **DISPOSAL INFORMATION**



The Symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household or commercial waste at the end of its working life. The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

**Product Disposal Instructions:** When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authorities recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

**Product Disposal Instructions for Business users:** This product should not be mixed with other commercial waste for disposal.

## **POSITION**

This appliance should be positioned on a firm level surface in a fire surround; the customer should establish the suitability of the surround for use with an Electric Fire.

## **CLEANING & MAINTENANCE**

***BEFORE ANY CLEANING OR MAINTENANCE IS CARRIED OUT THE HEATER MUST BE DISCONNECTED FROM THE MAINS SUPPLY.***

### **BRASS & OTHER DECORATIVE PARTS**

***Under no circumstances use an abrasive cleaner on brass finish. Such use will cause permanent damage to the appearance of your fire.***

All brass has been lacquered to prevent tarnishing and maintain a lustre appearance. It is important to use care in cleaning. Dusting or wiping with a damp cloth is recommended in order to preserve the lacquered finish.

### **FUEL EFFECT**

Coal and log effects can be vacuumed to remove dust, they may also be washed from time to time in warm soapy water. **DO NOT** replace on the fire until they are completely dry.

### **FLAME EFFECT**

The speed of the spinner flame effect can be varied by twisting the vanes, the greater the angle of the vanes, the faster the speed of rotation of the spinner. The vanes on the spinner should all be set at the same angle.

If there is no air flow through the fire the spinners will cease to spin. For a good spinner action ensure air can enter the back of the fire. (do not place right against a wall.

## **OPERATION**

The fire may be operated for Flame effect only without the heating elements being switched on. 1kW or 2kW of heat may be used by selective use of the switches.

### **HEAT AND FLAME EFFECT CONTROL**

The three switches on the Heater provide the Flame effect, 1kW & 2kW of heat output.

To run the Flame effect only depress the first switch on the left, for the Flame effect + 1kW of heat depress the left and middle switches, for the Flame effect + 2kW of heat depress all three switches.

**DO NOT COVER THE HEATER OUTLET.**

## **CHANGING THE BULB**

Remove the Inset unit from the Fireplace in order to access the bulb holder; access is available from the rear of the unit.

The replacement bulb required is a 60w 230/240v Fireglow bulb.

N.B. *CFL or LED Bulbs are not suitable as they will not generate enough air currents to operate the Spinner.*

When the bulb has been successfully replaced the unit can be reinstalled into the Fireplace.