

- The fire must be easily removable from the wall opening without modification to the structure of the aperture.
- Always isolate the fused spur by switching off and removing the fuse prior to installing or uninstalling the fire.
- Always ensure that the fused spur is accessible.
- Opening by disconnecting the fire at the fixed cable outlet.
- Where a hard wired option is used the appliance must be able to be removed from the fire surround or wall outlet with an isolator switch. This must only be undertaken by a competent person.
- Your fire is fitted with a moulded 3 pin plug which may be removed and the mains lead connected to a fixed cable fused isolator.
- For Fires fixed into a surround with suitable fixing kit the appliance must be connected to a readily accessible

Fitting of the fire (Hard Wired) Option:

- This heater should not be used with an external programme controller, thermal control, timer or any other device which switches the heater on automatically as a fire risk may occur if the heater has been accidentally covered or moved.
- Do not use in the immediate surroundings of a bath, shower or swimming pool.
- The heater should not be used immediately below a socket outlet.
- Do not cover or hang clothes, towels etc. over or near the heater as this could cause over-heating and possible damage.
- Always install the fire so that the plug is accessible.

The wire which is coloured Green/Yellow must be connected to the terminal in the plug which is marked by the letter E or by the earth symbol or coloured Green or Green/Yellow.
The wire which is coloured Blue must be connected to the terminal in the plug which is marked by the letter N or coloured Black.
The wire which is coloured Brown must be connected to the terminal in the plug which is marked by the letter L or coloured Red.

If you are fitting an alternative type of plug then the colours of the wires in the mains cord may not correspond with the identifying markings on the plug terminals. In this case proceed as follows:
Note: Any plug cut off from a flexible cord will present a shock hazard if inserted in a Mains socket elsewhere in the house; to avoid this it must be disposed of immediately.
If your fire is fitted with a moulded on mains plug which is not suitable for the socket outlets in your home, the plug must be cut off and an appropriate one fitted.

The wires in the mains supply cord are coloured in accordance with the following code:
Green and Yellow = Earth, Blue = Neutral, Brown = Live.
The mains cord of the fire has a UK type plug fitted with a 13amp fuse. When replacing a fuse, use a 13amp fuse approved to BS 1362. The fuse cover of a moulded on plug must be refitted when changing the fuse. Should the fuse cover become lost, the plug must not be used until the correct replacement fuse cover is obtained from your service agent.

Check that the voltage stated on the rating label of your fire at the rear is the same as your house electricity supply which must be AC (alternating current).

ELECTRICAL INSTALLATION

1

THIS APPLIANCE MUST BE EARTHED

Installation and Maintenance Instructions

Lavaspape III Inset Electric Fire - Fixed fuel bed

Models: LSIII series

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

Your IMPERIAL electric fire has been made with great care. Here are some instructions including cleaning and maintenance, which will help you keep your fire in good condition for many years. If you experience any parts or service problems contact either your retailer or IMPERIAL FIRES LTD.

IMPERIAL FIRES LTD.

 
St Marys Road, Nuneaton, Warwickshire, CV11 5AU
Telephone: +44(0) 2476 377550.

Email: sales@imperial-fires.co.uk
Web: www.imperial-fires.co.uk




Part No I011165 - Issue B

Control Panel



The three switches control the following:
Left Hand Switch - Light effect only - (I = ON; O = OFF)
Middle switch - Light effect and first heat setting
Right Hand Switch - Full Heat.
Round Control - Thermostat - Note numbers do not represent temperature in degrees
Adjustment position indicated with marker - item A

CONTROLS

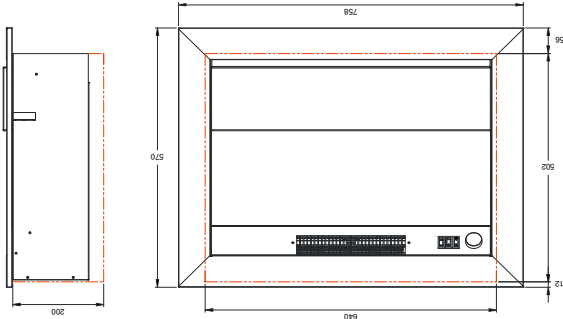

Your IMPERIAL fire is designed to fit into a bespoke fireplace opening. Before installing, thoroughly clean the fireplace and ensure debris and dust cannot enter the fire.
The fire should be installed into an aperture 640mm wide x 502mm high. The fireplace must have a minimum depth of 200mm from the front edge to the rear wall to allow for air to move freely around the appliance.
Screw the fire to the fireplace through the fixing flange holes in either side. Note: Servicing of the product may require the removal of the fire—ensure that access to the mains connection can be reached easily after the fire has been removed from the fireplace. Always disconnect the fire from the mains before attempting any maintenance.
If the appliance is situated below a shelf or projection ensure that at least 50 mm gap is maintained between the heat outlet and the underside of the projection.

FIREPLACE INSTALLATION

2



IMPERIAL FIRES

Packing list

Glove (If Applicable)		Affix Second Data Label HERE
Cast Grate (If Applicable)		
Coal Pack (If Applicable)		
Pebble Pack (If Applicable)		
Fixing Bracket (If Applicable)		
White Fuel Pack (If Applicable)		
Date:		Packed By:
Model Type: 2kW		

7

Figure 1 below shows a rear view of the frame highlighting the 4 frame location slots,

Figure 2 below shows the frame location pegs on the fire chassis.

To fit the frame:

First remove the 2 screws that are screwed into the top frame location pegs and retain for when the frame is located.

Then offer the frame up to the Chassis of the fire lining up the bottom location pegs INBOARD the uprights that form the one side of the location slot as shown in Figure 2.

Next tilt the frame back toward the Chassis lifting slightly to clear the top points of the upper location pegs; then slide the frame down onto the location pegs making sure all pegs are engaged.

Finally replace the frame fixing screws into the top location pegs - note that the screws do not tighten into the frame but serve simply as a stop to prevent inadvertent removal of the frame.

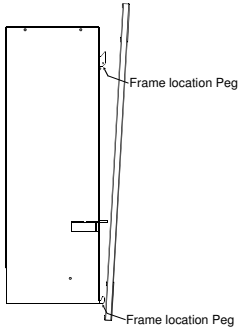


Fig 1



Fig 2


To remove the frame:

Remove the frame fixing screws and retain for when the frame is re-located, lift the frame upward and toward you until clear of the location pegs.

SAFETY CUT-OUT

The heating element is fitted with a cut-out which will switch off the fire if it overheats. Should this occur follow the points below.

1. Switch the fire off at the wall outlet
2. Ensure that there are no obstructions in or around the air inlet see Fig 3
3. After approximately 5 minutes switch the fire on.
(The thermal cut-out will take approximately 5 minutes to reset once activated - do not switch the fire on until the above checks have been completed.)
4. If the fault persists contact your retailer or Imperial Fires Customer Service on the telephone numbers provided at the beginning of these instructions.

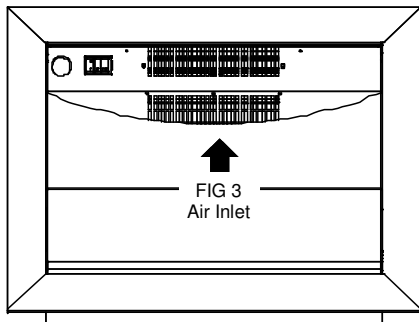

SPARES:

Only genuine IMPERIAL spares should be used, and these can normally be obtained from your retailer. If you have any problems contact IMPERIAL FIRES at the address on the front of these instructions. Below is a list of the most common parts.

Item	Part Number	Quantity per Fire
Lamp 40w SES Max—Clear	102210	2
Moulded Chipping Fuel Bed—1 piece	I01104	1
Mains Cord UK Plug MAINS CORD: If the mains supply cord is damaged it must be replaced by a competent electrician or similarly qualified person.	I00134	1

The flame effect can be used without heat. Depress the first switch on the left.

HEAT

Model 1Kw Depress the left and middle switches for cool air or depress all three for full heat

Model 2Kw Depress the left and middle switches for 750w / 1Kw or depress all 3 switches for 1.5 or 2Kw heat (dependant on model).

The thermostat control can then be set to the desired level.

THE HEAT OUTLET IS ON THE TOP OF THE FIRE NEXT TO THE CONTROLS; DO NOT TOUCH OR PLACE ANY MATERIAL IN THIS AREA WHEN THE FIRE IS IN OPERATION OR HAS RECENTLY BEEN IN USE.

THERMOSTAT

The thermostat enables the room temperature to be controlled around a pre-set level and can be used when the either of the two heat switches are depressed. To set the thermostat, first set the control at position 9 then turn on the heating elements and heat the room to the desired temperature. When this temperature has been reached reduce the setting by turning the control anti-clockwise towards a lower figure until you hear the thermostat click off and the heat from the fan cease. When the room temperature drops the thermostat will turn the full heat from the fire back on again.

The thermostat control is designed to operate at room temperatures of 0 – 40°C .

At very low temperatures (approx. 6° C) the thermostat will **NOT** turn the fire off.

GENERAL CLEANING

DISCONNECT THE FIRE FROM THE SUPPLY BEFORE CLEANING OR CARRYING OUT ANY MAINTENANCE CLEANING

Warning: If the air inlet becomes covered with dust the fire may cut out. This is a safety feature. Refer to Safety Cut-out information for further action.

Brass and other decorative parts

Under no circumstances use an abrasive cleaner on bright surfaces. Such use will cause permanent damage to the appearance of your fire.

It is important to use care in cleaning. Dusting or wiping with a damp cloth is recommended in order to preserve the finish.

Fuel Effect: Clean with a vacuum cleaner attachment or a soft brush.

LAMP REPLACEMENT:

TURN OFF APPLIANCE AT MAINS AND UNPLUG FROM SOCKET

Remove the outer trim by pulling forward at the base of the trim and lifting upwards to clear guide hooks.

NOTE: the trim is attached with magnets; care should be taken when removing the trim otherwise damage may result.

Remove the two screws located on either side of the front fret.

Pull the fret clear of the fire.

Remove the fuel bed (This will then give access to the two lamps).

Ensure that the lamps are cool before removing).

Unscrew the lamps in an anti-clockwise direction

After replacing lamps replace all items in the reverse order.

MAINTENANCE:

It is recommended that the fire is cleaned on a regular basis to prevent build up of dust and fluff which will reduce the performance of the product.

It is not recommended that any part of the fire is removed other than those parts specified in the instructions.

For any other maintenance contact your nearest stockist.

This product is guaranteed against faulty parts or workmanship for 12 months from the date of purchase.

To validate the guarantee the product must be returned to the retailer or supplier for repair or replacement with this sheet completed with the detail requested. (Please do not send a photocopy).

Imperial Fires Limited are not responsible for any cost incurred by the customer in returning the product to the seller.

When making a claim under warranty you must provide the above details requested your warranty might be invalid. Return this information to your dealer or contact Imperial Fires Limited.

Imperial Fires Limited reserves the right to refuse warranty for any product returned that does not have valid proof of date of purchase:

Please return your original sales invoice with any returned product.

This guarantee does not affect your statutory rights.

Date of Purchase	Enclosed original sales invoice. <input type="checkbox"/> YES <input type="checkbox"/> NO
Retailer name and address	
Your name and address	

DISPOSAL INFORMATION

The Symbol shown here and on the product indicates that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

Product Disposal Instructions: When you have no further use for the product, please dispose the product at your local authorities recycling centre. For business users Do Not dispose of the product with normal commercial waste.

