

Zig Control Panels:

SP-7v Operation Instructions:

1. Car/Van battery selector switch: (Offers 12V power from either of the on board batteries). Centre is off.
2. Battery state indicator: (High and low battery condition).
3. Accessory switches: lights, pump, aux I, aux II.
(**N.B.** Consult manufacturers instruction manual for accessories covered by auxiliary switches).
4. Pump running indicator: (LED lights to show when pump is in use).
5. Fuse compartment: (In order to remove cover flex from the top and spring out).
6. Fuses:
(All fuses are 1.25" glass quick blow fuses rate at 10 amps dedicated as shown on inside of fuse cover. All fuses and other spares are available from your caravan dealer).

