



St Mary's Road
Nuneaton,
Warwickshire,
CV11 5AU
ENGLAND

Phone: +44 (0) 2476 377550
Fax: +44 (0) 2476 388378

INLET FLAP

Fitting Instructions

1. Identify which existing flap you have. If your old flap has two small spigots either side which fit into the door and act as the hinge, you should cut the top of the new flap away using a Stanley knife, see Figure 1, marked B. The flap can then be easily fitted by bending it and pushing the spigots into the existing holes in the door.

2. If you have the flap, which is held on by two rivets, you should cut the side spigots and bosses off your new flap, see figure 1, marked A. Drill out the old rivets using a 4mm drill bit. Clean the area with warm water.

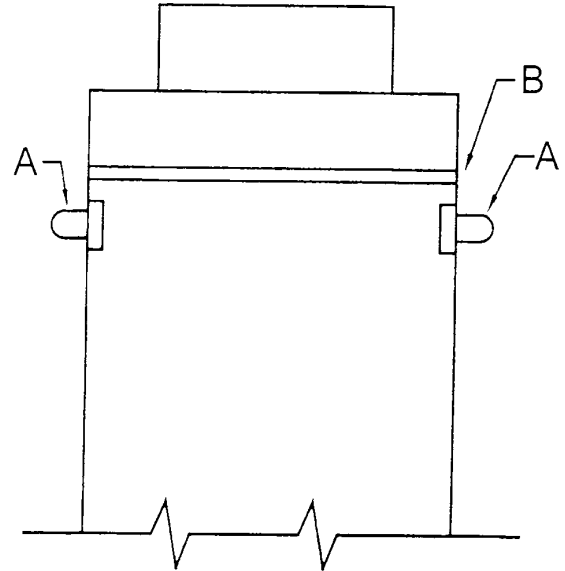


FIGURE 1

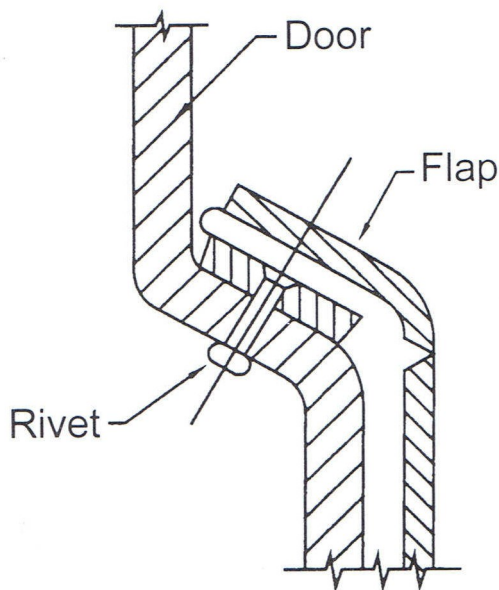


FIGURE 2

3. The new flap will be positioned as the original. Using a tape measure, mark the position of the rivet holes in the flap hinge. Drill the two holes in the flap using a 4mm bit.

4. Holding the flap in an 'open' position, rivet the flange into place. The flap should then fold downwards and snap shut into the door at the bottom. See Figure 2, showing cross section of door and flap fixing.